



Electrical Requirements

The following power supply must be provided:

2186ST: 120 V~, 61 W, 60 Hz

2186ST: 120 V~, 90 W, 60 Hz

2189: 120 V~, 111 W, 60 Hz

	 DANGER
	<p>Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. DO NOT immerse any part of this equipment in water. DO NOT use excessive water when cleaning. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle.</p> <p>008_051514</p>

A certified electrician must furnish sufficient power for proper machine operation and install any supplied receptacle. We recommend this equipment be on a dedicated and protected circuit. Failure to wire properly will void the warranty and may result in damage to the machine. It is Gold Medal Products Co.'s recommendation that this machine be plugged directly into a wall outlet. The use of extension cords is not recommended due to safety concerns, and may cause sacrificed and/or reduced performance. Make sure cord is located to prevent a trip hazard or unit upset.

Before You Plug In Machine

1. Make sure all machine switches are OFF before plugging equipment into receptacle.
2. Make sure wall outlet can accept the grounded plugs (where applicable) on the power supply cord.
3. The wall outlet must have the proper polarity. If in doubt, have a competent electrician inspect the outlet and correct if necessary.
4. **DO NOT** use a grounded to un-grounded receptacle adapter (where applicable).
5. Install unit in a level position.

	 CAUTION
	<p>If the supply cord is damaged, it must be replaced by Gold Medal Products Co., its service agent or similarly qualified persons in order to avoid a hazard.</p> <p>039_080614</p>



OPERATING INSTRUCTIONS

Controls and Their Functions

POWER SWITCH

Two position, ON/OFF lighted rocker switch - supplies power to the light and to heat element.

The heat element on the underside of the warmer pan keeps popcorn/nachos warm and fresh in the cabinet. The yellow shatterproof light bulb also warms the product while lighting the top portion of the cabinet.

Caution: To replace the 11 watt yellow light bulb, use a maximum 11 watt, shatterproof bulb (the replacement bulb **MUST** be shatterproof).







Power Switch

Operating Instructions

To load the Servalot, remove the lid and pour in the food product. For best display, fill warmer 3/4 full.

Care and Cleaning

	<div data-bbox="820 304 1079 346"> DANGER</div> <p>Machine must be properly grounded to prevent electrical shock to personnel. DO NOT immerse in water. Always unplug the equipment before cleaning or servicing.</p> <p data-bbox="1307 451 1404 472">025_020314</p>
---	--

	<div data-bbox="812 535 1088 577"> WARNING</div> <p>To avoid burns, DO NOT touch heated surfaces. DO NOT place or leave objects in contact with heated surfaces.</p> <p data-bbox="1307 661 1404 682">009_092414</p>
---	--

Good sanitation practice demands that all food preparation equipment be cleaned regularly (only use non-toxic, food grade cleaners). A clean looking, well-kept machine is one of the best ways of advertising your product.

Follow the directions below to clean and sanitize unit each day after use.

1. Turn machine OFF, unplug unit and allow it to cool before attempting to clean.
2. Use a damp cloth to remove all dirt and grease spots.

Wipe stainless steel parts with a clean cloth and cleaner designed for stainless steel, such as Gold Medal Watchdog Stainless Cleaner (Item No. 2088).

DO NOT use oven cleaners or abrasive materials as they will damage parts of machine.
3. Clean plastic panels with glass cleaner. Gold Medal Watchdog Glass Cleaner (Item No. 2588) is recommended.

Ammonia cleaners will damage plastic panels. Use only non-ammonia cleaners, such as Gold Medal Watchdog Glass Cleaner (Item No. 2588).